


BATH AND SHOWER BASE TILING LIP | INSTALLATION

This high impact rigid PVC modified grade material supplied will allow for the bath/shower base to be flashed along the full length and ends to conform to the standard.

The PVC strip should be cut to the required lengths plus 50mm, and mitred at the corners allowing a 50mm overlap that must be folded and secured to the adjoining piece to form a continuous element. The edge of the bath/shower tray and also the area where the flashing material and the rim of the bath/shower tray meet should be filled with a mould resistant silicone bathroom sealant.

Approved wet seal membrane should be applied in-between the wall sheeting and the tiles.

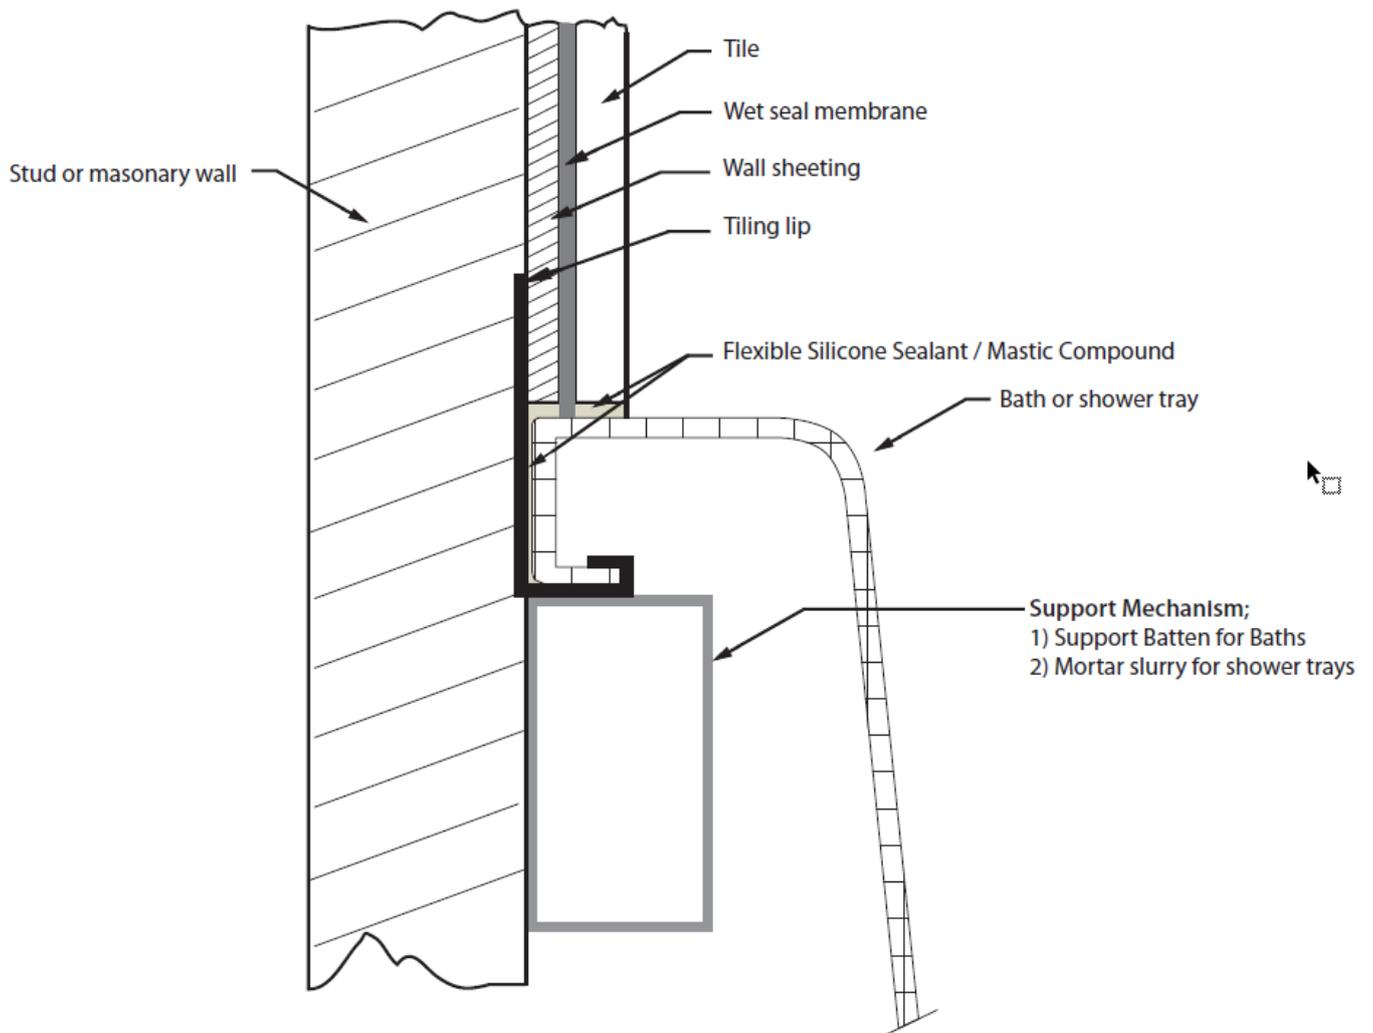

REFERENCES:

Australian Standard AS. 3470-2010

Fig 3.2 Typical Bath Junctions

Section 3. Installations 3.6 Pre Formed Shower Bases

3.7 Baths with showers over them

3.8 Baths and Spas